

# Cura Terrae LSE N20-4405

## air monitoring of Nitrous oxide

### A new solution for air pollution monitoring

LSE Monitors has developed a robust and cost-effective analyzer based on photo acoustics with a quantum cascade laser.

The concentration of N<sub>2</sub>O in ambient air is continuously determined with a sensitivity of 0.005 ppm and a time resolution of 120 s.




#### Continuous nitrous oxide measurements in air

Nitrous oxide (N<sub>2</sub>O) is a greenhouse gas with a very big global warming potential. After CO2 and CH4 it is the most important greenhouse gas.

Nitrous oxide is naturally emitted from soils and oceans. Human activity contributes to the release of N<sub>2</sub>O through the cultivation of soil and the production and use of nitrogen fertilizers, the production of nylon. and the burning of fossil fuels and other organic matter. Since 1750, the global concentration of N<sub>2</sub>O has increased significantly.

To decrease the greenhouse gas effect, emissions must be reduced. Monitoring is then needed to follow the effect of methods to reduce nitrous oxide concentrations.



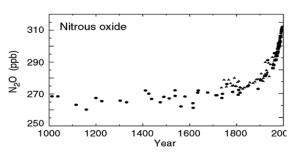

- Very low detection limit (ppb range)
- Active gas sampling by integrated pump
- Virtually maintenance-free instrument
- Large color graphics with touch screen
- CE certified
- Two-year warranty


User-friendly software

#### **LSE Monitors**

LSE Monitors is a joint venture between Sensor Sense BV in Nijmegen and Synspec BV in Groningen, combining knowledge of laser research, electronic design and analyser production.

#### Concept of measurement

Infrared light produced by a quantum cascade laser is directed through a measurement cell. This cell is continuously flushed with sample gas. An integrated pump sucks ambient air through the monitor. If  $N_2O$  is present in the sample gas, the pressure increases as a result of absorption of the laser light. The laser light intensity is modulated at an acoustic frequency of 1600 Hz and the resulting pressure modulation is measured by small microphones. The amplitude is proportional to the  $N_2O$  concentration.

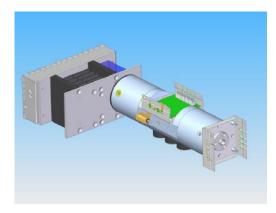

$\sim$		
-S	necitio	cations
	pcomi	Jacions

Noise (1σ, 120 s) 0.005 ppm

Range 0 - 15 ppm, on request tunable to higher con-

centrations

Precision a maximum precision of 0.005 ppm or 2 % of

measured value, whichever is the biggest

Time resolution 120 s
Response time ( $T_{10-90\%}$ ) < 2 min
Linearity  $R^2 > 0.999$ Sample flow rate 80 ml/min



Interval we advice every 30 days

Calibration gas a known and suited concentration of N<sub>2</sub>O in

dry air



Sample temperature 5 - 25°C

Sample pressure stable during measurements, 0.7 - 1.0 atm

Sample humidity Permapure dryer must be installed to reduce the

water concentration to a dewpoint temperature


below -10 C.

Voltage supply 230 Vac, 110 Vac available on request

Coating of gas connections
Tubing material

we advice PFA or Silcosteel
we advice PFA tubing

Gas connections Swagelock compatible, 1/8"

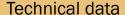

Dimensions suited for installation in 19" rack, 3 Standard

Height Units (12 cm), depth 37,2 cm

Weight 8 kg
Power demand 200 W

Communication connections 1 x Ethernet, 1 x RS232, 4 x USB

 $4\ x$  Analogue and  $7\ x$  Digital outputs

4 x Analogue and 4 x Digital inputs

Protocols available Hessen-Bayern, AK

